

#HTK-BH52 AIR CHUTE INSTALL

For use with model #BHM-52

Kit contents

(20) Sheet metal screws

1. Remove the heat transfer kit cover plate as outlined in your individual fireplace manual. Save screws. See Figure 1.

EXTERIOR KIT INSTALLS (HTK-EXT): Verify the damper lays against the outer shell of the fireplace when in resting position. Ensure the damper will move freely when the fan is engaged. See Figure 2.

INTERIOR KIT INSTALLS (HTK-INT): Remove the damper from the heat transfer kit air chute by pushing the metal tabs through the holes, and pulling the damper out of the air chute. See Figure 3.

2. Secure the air chute to the fireplace using (4) sheet metal screws previously removed and (10) sheet metal screws provided. See Figure 4.
3. Install the collar to the top of the air chute using the (4) sheet metal screws provided. See Figure 5.
4. Save remaining screws for air duct installation of your specific heat transfer kit. See your HTK-INT and/or HTK-EXT installation manual.

