8.3 #SP41-500 Log Set Installation

CAUTION: Do not place logs or lava rock directly over burner port holes. Improper log placement may affect flame appearance and cause excessive soot to build upon the logs and glass.

- If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.
- Log numbers are located on the bottom of each log. Refer to the following instructions and illustrations for proper log placement.
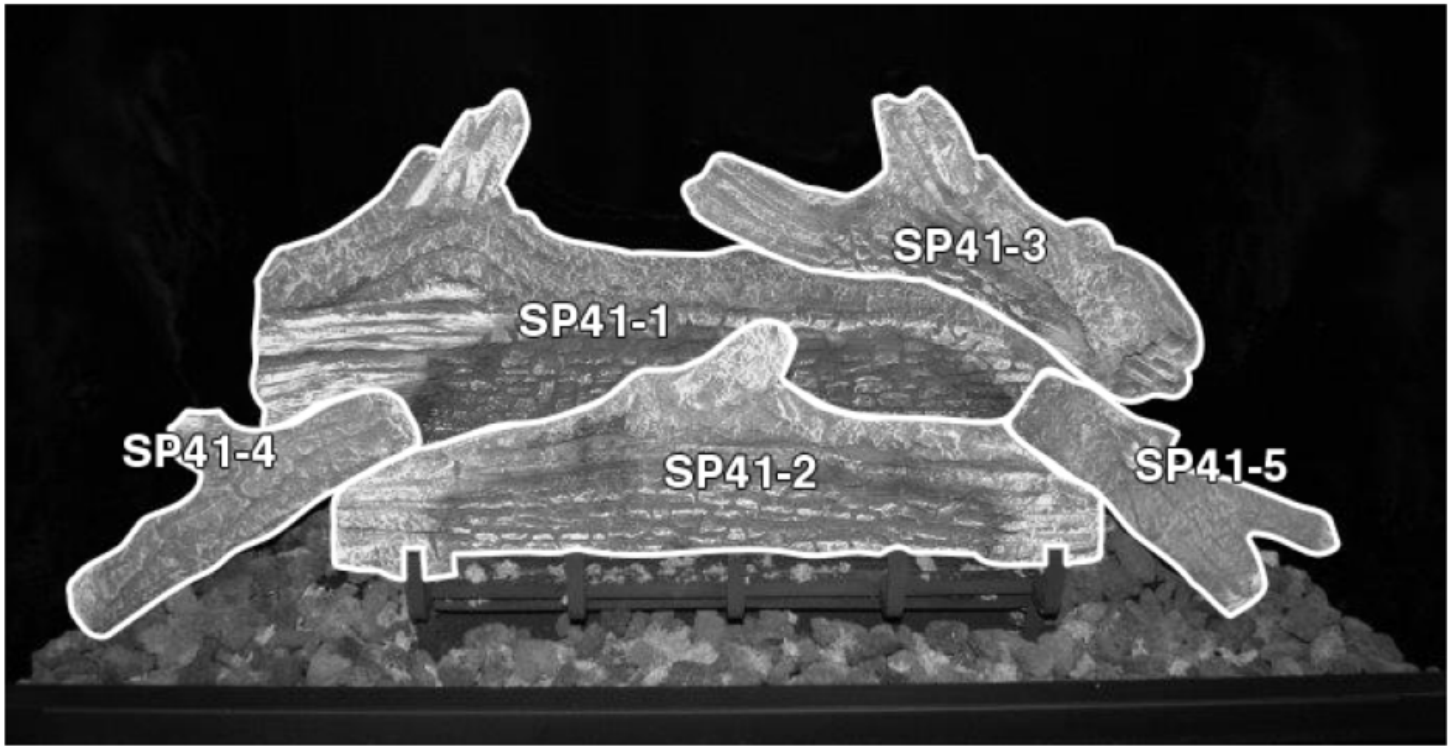
1. Align the holes in the bottom of log SP41-1 with the mounting pins on the log plates at the back of the firebox. Push log down to seat.
2. Align log SP41-2 with the notch in log SP41-1 as shown.
3. Align log SP41-3 as shown.
4. Align SP41-4 and SP41-5 logs with the notches in log SP41-3 as shown.
5. Distribute lava rock onto burner cover in front of the burner. Do not block burner ports or airspaces.
6. Use a steel or stiff bristle nylon brush to distribute rock wool embers onto logs and burner.