

#500-BAK BEACH FIRE ACCENT KIT

For use with models
#CSK-29-G and #BAY-36-G

NOTE: Log numbers and rock numbers are located on the bottom of each accent piece. Refer to the following instructions and illustration for proper accent piece placement. Your components may look different than the ones shown.

NOTE: Log and rock pieces may be moved or removed to prevent potential sooting. Do not set any accent piece on top of the burner tube shadow.

NOTE: Depending on your specific application, such as venting configuration and gas installation, glass media covering the burner ports may be removed for proper flame appearance.

CAUTION: Do not set accent media directly on top of burner tube shadow. Do not block pilot assembly. This could cause a potentially hazardous situation.

Kit Components:

- (10) Accent Rocks
- (5) Beach Log Accent Pieces

Model #CSK-29-G

1. Turn the light kit on. The burner tube will produce a dark shadow on the glass media. Use this outline as a reference to place your accent media outside of the burner tube shadow.
2. #108, #208, & #308 Series Glass Media - Place rocks #11, #5, and

3. #7, then place logs #1-BF29 and #2-BF29 directly on the burner cover/screen as shown.
3. Install 8 lb. (3.6 kg) of glass media onto the burner cover and pilot shield. Verify glass media is one layer deep.
4. Place the rest of the rocks as shown.
5. Place logs #3-BF29 to #5-BF29 as shown.
6. #108 & #208 Series Glass Media - Install the rest of the glass media onto the burner cover.
Natural gas installations may need up to 50% of glass media removed covering burner ports for proper flame appearance.
Propane Installations: Remove up to 1 to 1-1/2 pounds of glass media.
7. #308 Series Glass Media - Install the rest of the glass media onto the burner cover.
Natural gas installations requires removal of 50% of the glass media covering burner ports.
Propane installations requires removal of 100% of the glass media covering burner ports.
8. OPTIONAL: Distribute rockwool embers onto accent pieces and burner using a stiff bristle brush.

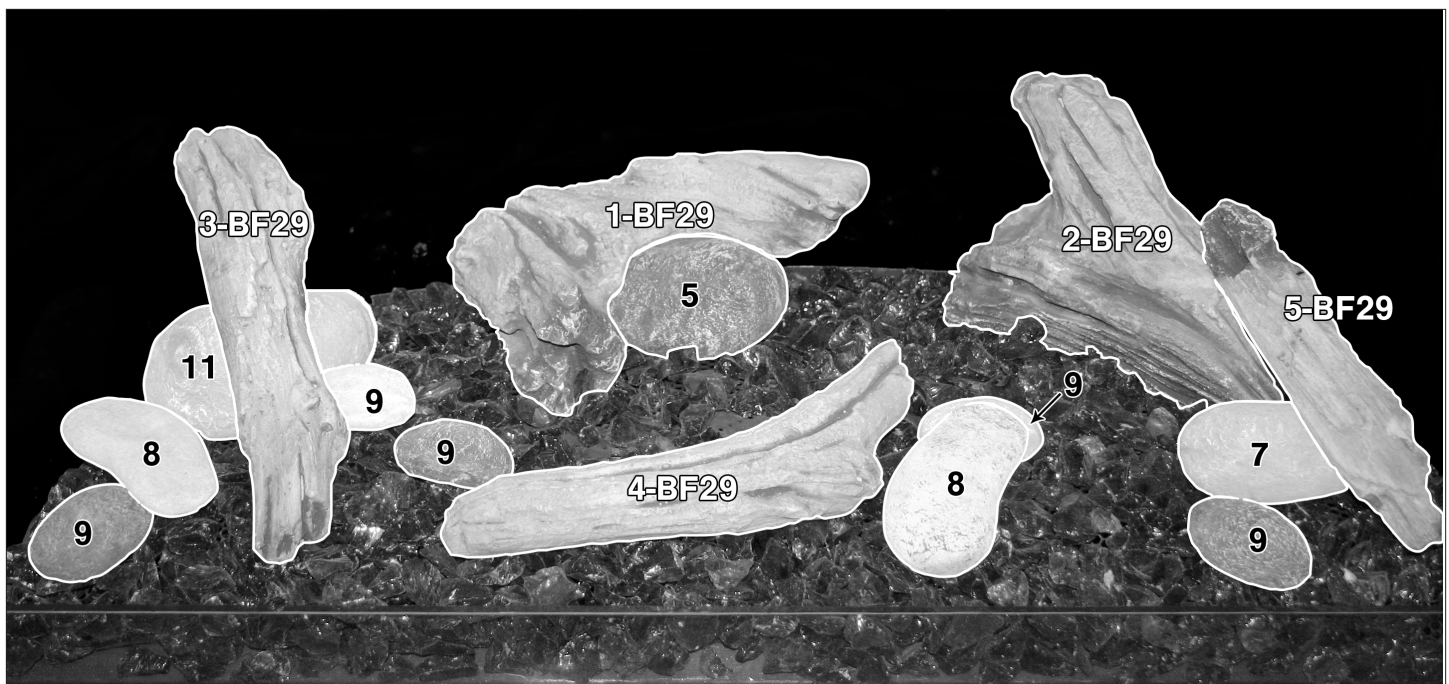


Figure 1, Model #CSK-29-G

Model #BAY-36-G

1. Turn the light kit on. The burner tube will produce a dark shadow on the glass media. Use this outline as a reference to place your accent media outside of the burner tube shadow.
2. Place rocks #11 and #5, then place logs #1-BF29 and #2-BF29 directly on the burner cover/screen as shown.
3. #109, #201, & #308 Series Glass Media:
Natural Gas Installations - Install 8 lb (3.6 kg) of glass media onto the burner cover and pilot shield. Verify glass media is one layer deep. Remove 50% or more of glass media covering burner ports for proper flame appearance.
Propane Installations - Install 9 lb (4 kg) of glass media onto the burner cover and pilot shield. Verify glass media is one layer deep. Remove 50% or more of glass media covering burner ports for proper flame appearance.
4. Place the rest of the rocks as shown in Figure 2.
5. Place logs #3-BF29, #4-BF29, and #5-BF29 as shown in Figure 2.
6. OPTIONAL: Distribute rockwool embers onto accent pieces and burner using a stiff bristle brush.

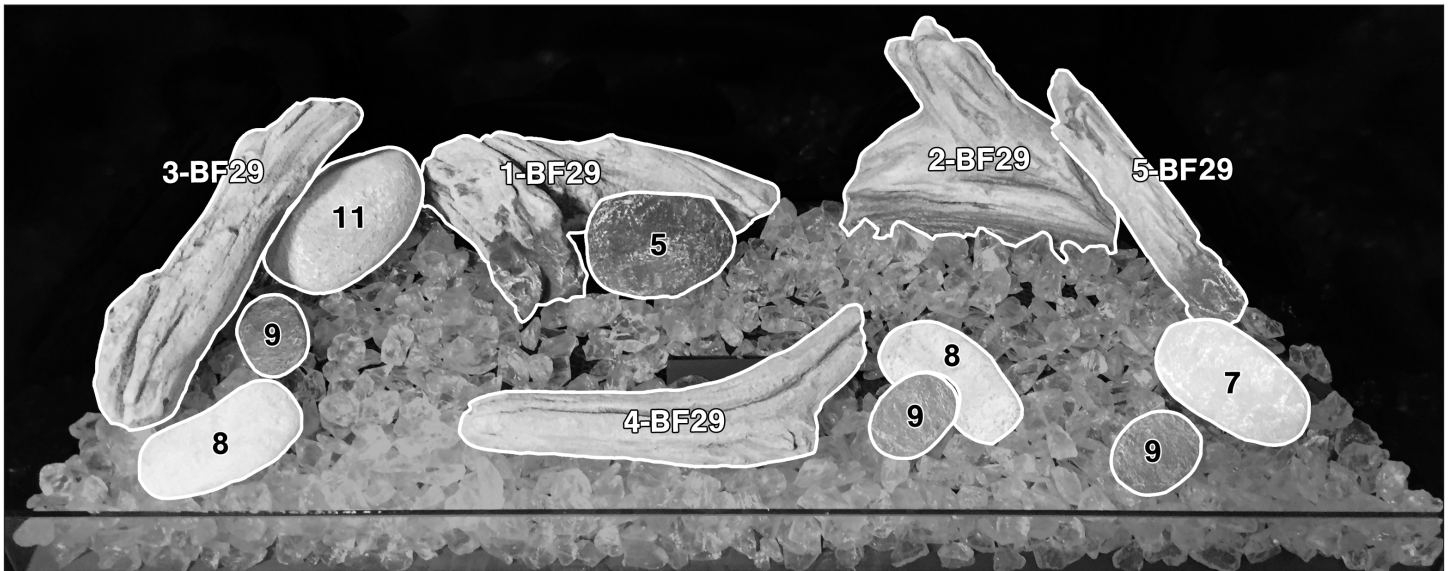


Figure 2, Model #BAY-36-G