

#B36-B501 LOG SET

CAUTION: Do not place logs directly over burner port holes. Improper log placement may affect flame appearance and cause excessive soot to build upon the logs and glass.

- If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.
 - Log numbers are located on the bottom of each log. Refer to the following instructions and illustrations for proper log placement.
1. Position the ember panel in front of the burner.

2. Align the holes in the bottom of base logs (36B-1 to 36B-4) with the mounting pins on the burner. Push logs down onto pins to seat.
3. Align logs 36B-5 and 36B-6 with the notches on base logs.
4. Align log 36B-7 with the bracket on the burner and the notch on ember panel.
5. Use a steel or stiff bristle nylon brush to distribute rock wool embers onto logs and burner.

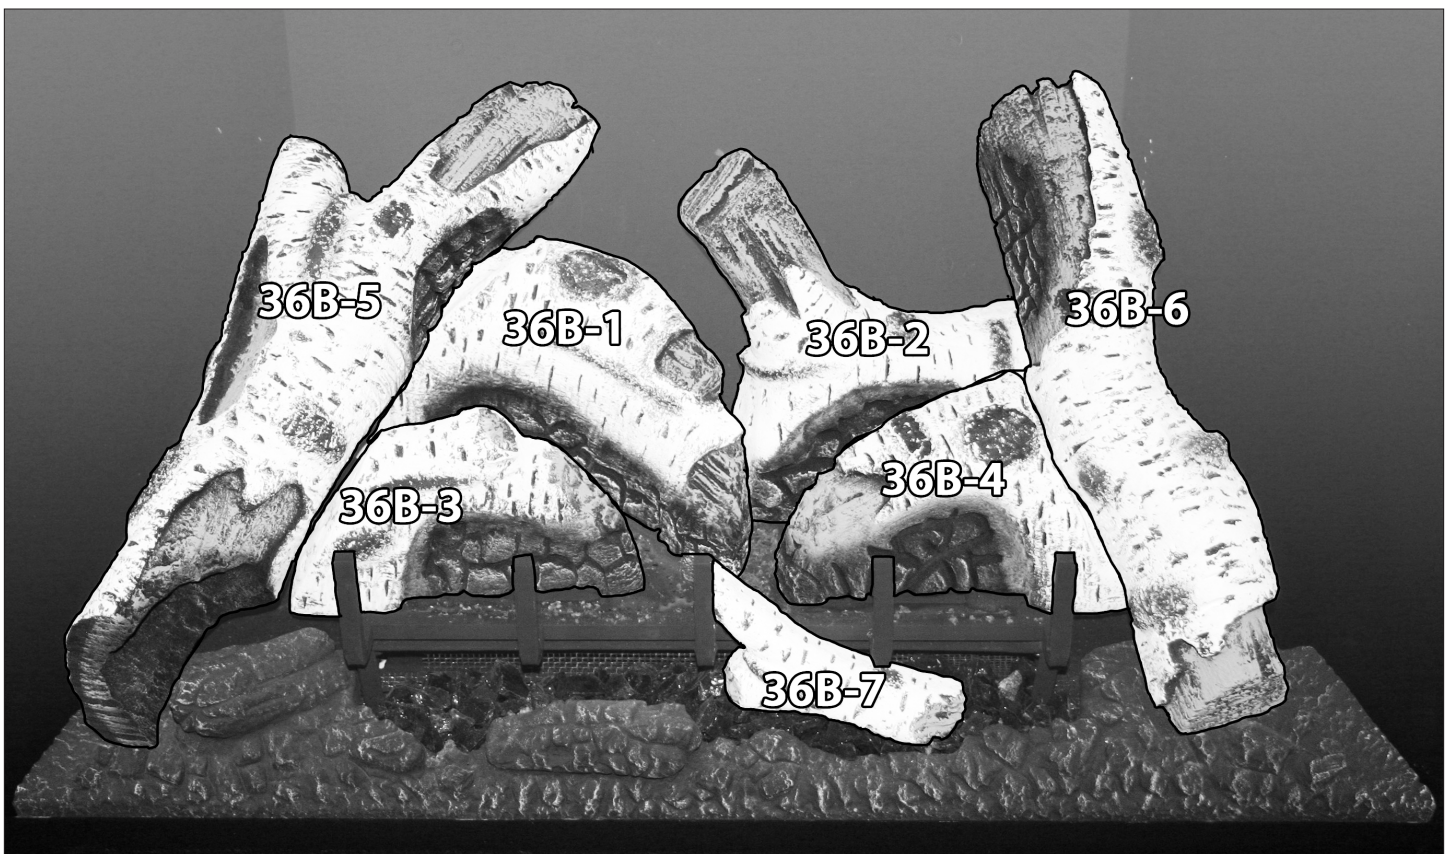


Figure 1, #B36-B501 Log Set Installation