

#CXS-500 LOG SET INSTALLATION

ATTENTION If converting to LP (propane) gas, do so now before installing log set. Follow instructions included with conversion kit.

NOTE Log numbers are located on bottom of each log. Refer to following instructions and illustrations for proper placement.

CAUTION Do not place logs directly over burner port holes. Improper log placement may affect flame appearance and cause excessive soot to build up on logs and glass.

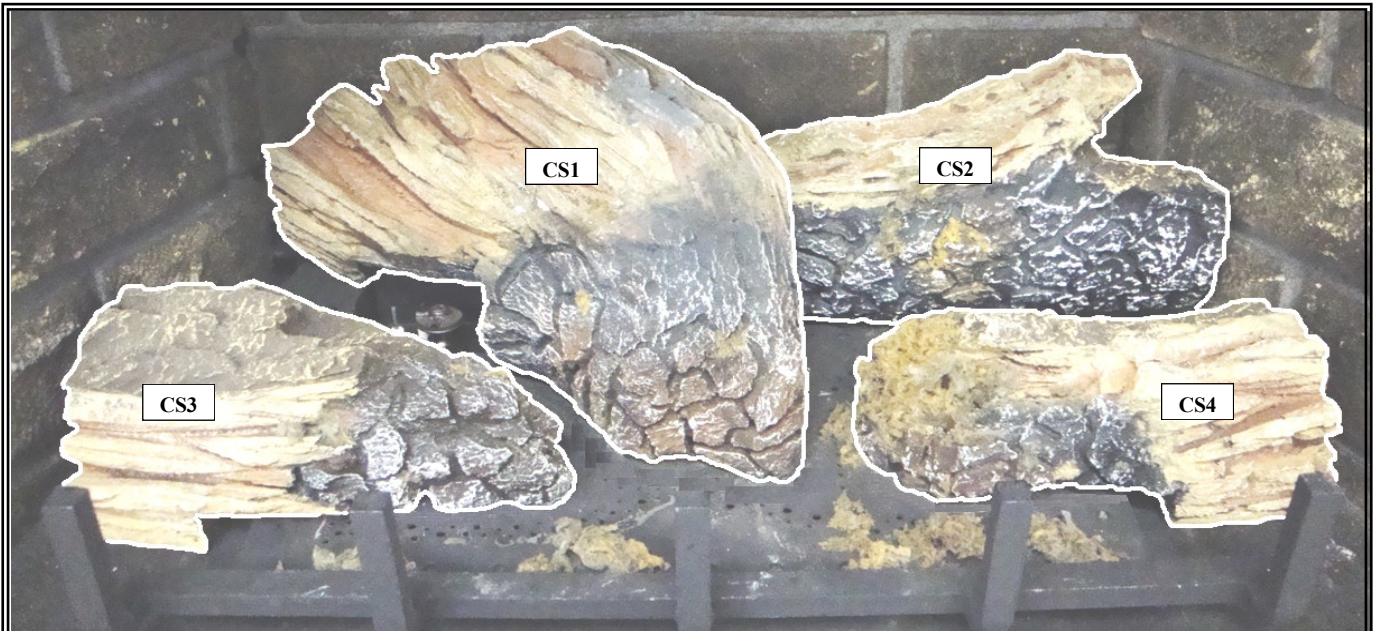


Figure 1a

Position CS1 log over pilot shield as shown above.
Align holes in bottom of base logs CS2,- CS4 to mounting pins on burner. Push logs down onto pins to seat.

Install CS5 - CS8 logs, aligning with notches in base logs.

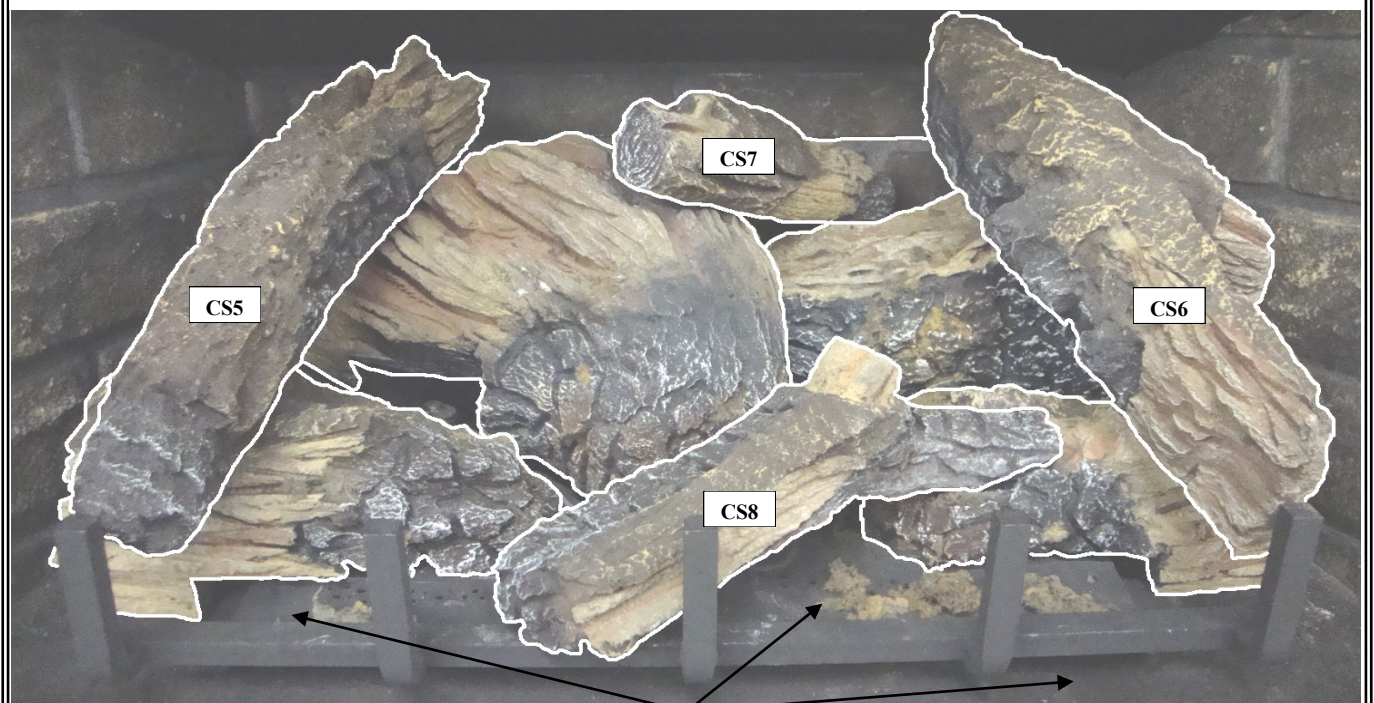


Figure 1b

Randomly place Klinkers in this area. Do not place directly over burner ports.
Use a steel or stiff bristle nylon brush to distribute Rock Wool Embers onto logs and burner.