

# CW40-501 & CW40-B501 LOG SETS

For use with model #CLW-40

**NOTE:** Numbers are located on the bottom of each log and rock piece. Refer to the following directions for proper placement. Your components may look different than the ones shown.

If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.

1. Install the logs as shown below.
2. Place the logs on top of the perimeter media, if installed. CW40-B501: place rock accent media as shown.
3. Ensure logs do not impede flame when placed across the burner.

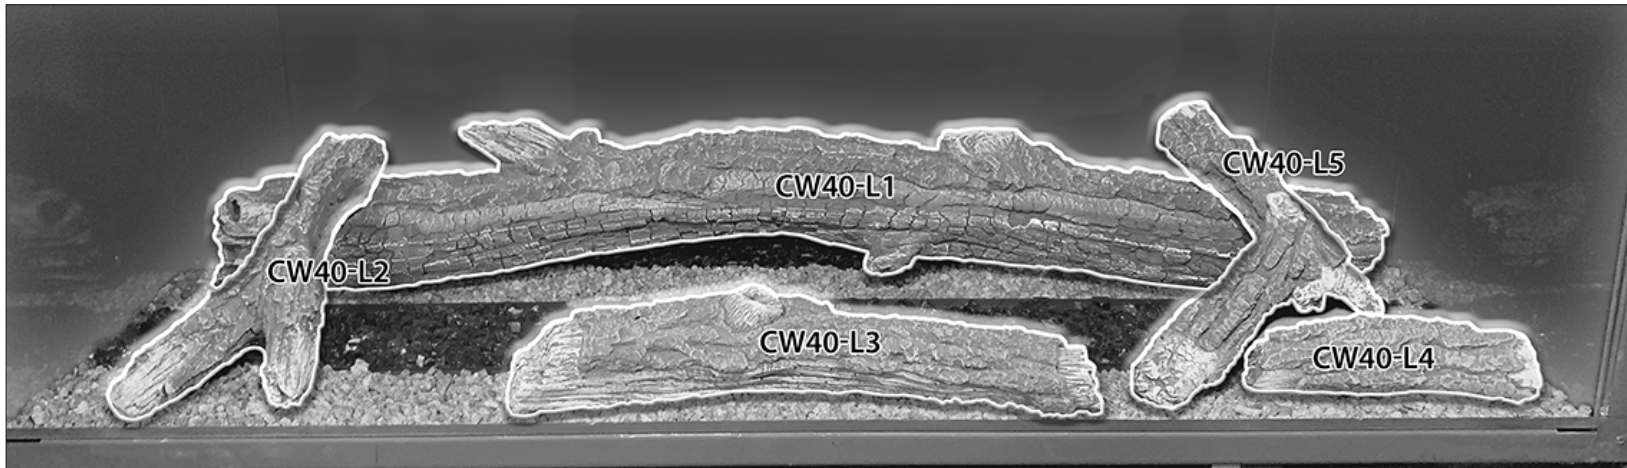


Figure 1, Traditional Log Set

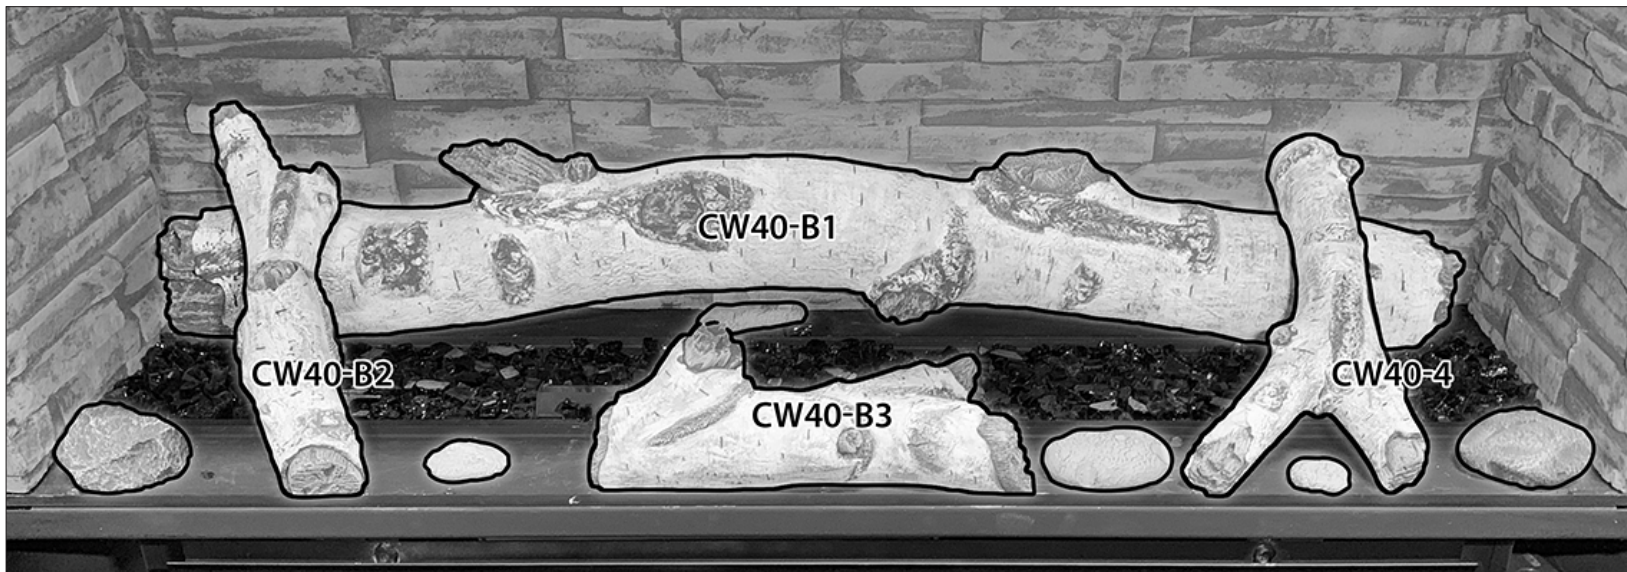


Figure 2, Birchwood Log Set