#BH52-500 & BH52-B501 LOG SETS




For use with models #BHM-52 (traditional logs) and #BHM-52-BW (birchwood logs)


CAUTION: Do not place logs directly over burner portholes. Improper log placement may affect flame appearance and cause excessive soot to build upon the logs and glass.

NOTE: Your logs may look different than shown. The logs will install the same for both traditional (#BH52-500) and birchwood (#BH52-B501).

- If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.
- Log numbers are located on the bottom of each log. Refer to the following instructions and illustrations for proper log placement.
- Using both hands, place log 1 at the rear of the firebox, as shown in Fig. 2. Slide the log forward until it rests against the log stop bracket flanges (Fig. 1).
- Align the holes in the bottom of logs 2 through 7 with the corresponding studs located on the burners. See Fig. 1 for burner stud locations
- 3. Set logs 2 through 7 into position as shown in Fig. 2.
- Place the left and right ember panels on their respective sides of log 5, as shown in Fig. 2. The right ember panel has a flat notch on the side closest to log 5.

Instructions continue on the following page.

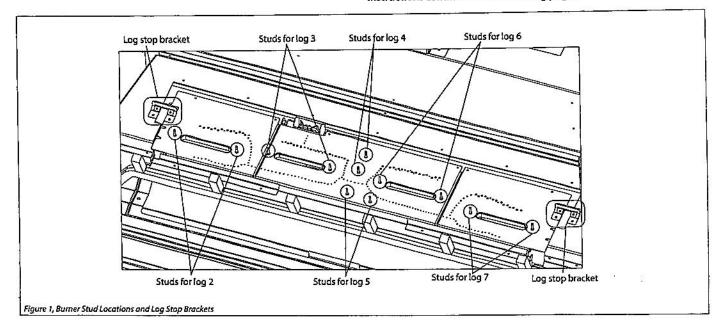

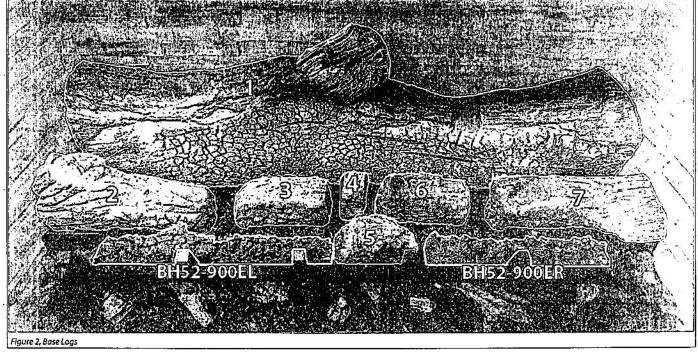


Use Figures 3, 4, and 5 together for the following instructions for proper log placement.


Figure 5 on the following page is the completed installation of the #BH52-500 traditional log set. Figure 6 on the following page is the completed installation of the #BH52-B501 birchwood log set.

- Align the hole in the bottom of log 8 with the stud on the left hand side of log 1 and set into position, as shown in Fig. 5 on the following page.
- 6. Align log 9 with the notches in log 2 and log 3 (Fig. 3). Place as

- shown in Fig. 5.
- 7. Align log 10 with the notches on logs 9 and 6 (Fig. 4), and place as shown in Fig. 5.
- 8. Align log 11 with the notch (Fig. 3) in the middle right of log 1, and place as shown in Fig. 5.
- 9. Align log 12 with the notch (Fig. 3) on log 7, as shown in Fig. 5.
- 10. Align log 13 with the notch on log 1 (Fig. 3), and place on logs 7 and 1, as shown in Fig. 5.

Instructions continue on the following page

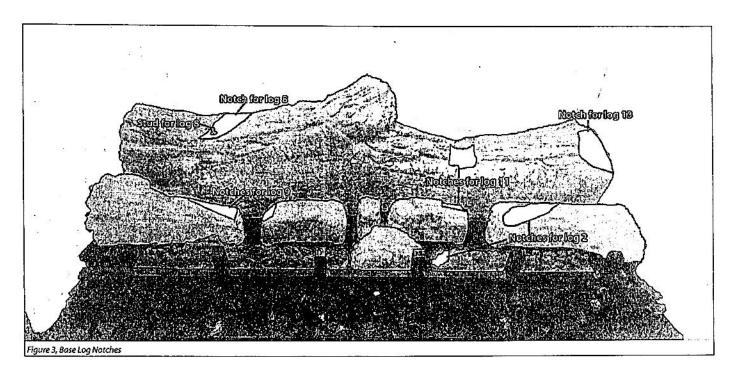

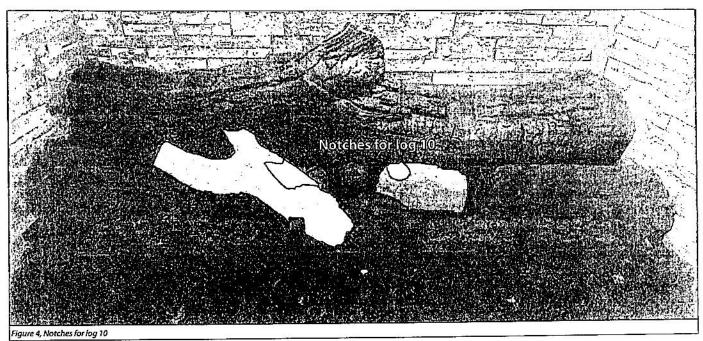

- 11. Place crushed glass media into the ember bed media tray.
- 12. Place logs 14 and 15 on the ember bed, as shown.
- Place the (6) charred pieces on top of the ember bed. We show one way to place the pieces, and you may place the pieces at your

discretion.

- 14. Distribute lava rock at the sides on the firebox floor.
- Use a steel or stiff bristle nylon brush to distribute rock wool embers onto logs and burner.

