

CWST-BAK BEACH ACCENT KIT

For use with model #CLW-ST

If converting to propane, complete the conversion before installing the media kit. Follow the conversion instructions included with the kit.

CAUTION: Do not set logs or rocks directly on top of burner ports. Do not block pilot assembly. This could cause a potentially hazardous situation.

Figure 1 is shown from the service side of the fireplace.

1. Install the logs and rocks as shown below. Figure 1 is the recommended rock accent media placement. The rocks are optional and you may install them on the front and rear perimeter area as desired.
2. Place perimeter media around logs, if installed.
3. Ensure logs do not impede flame when placed across the burner.

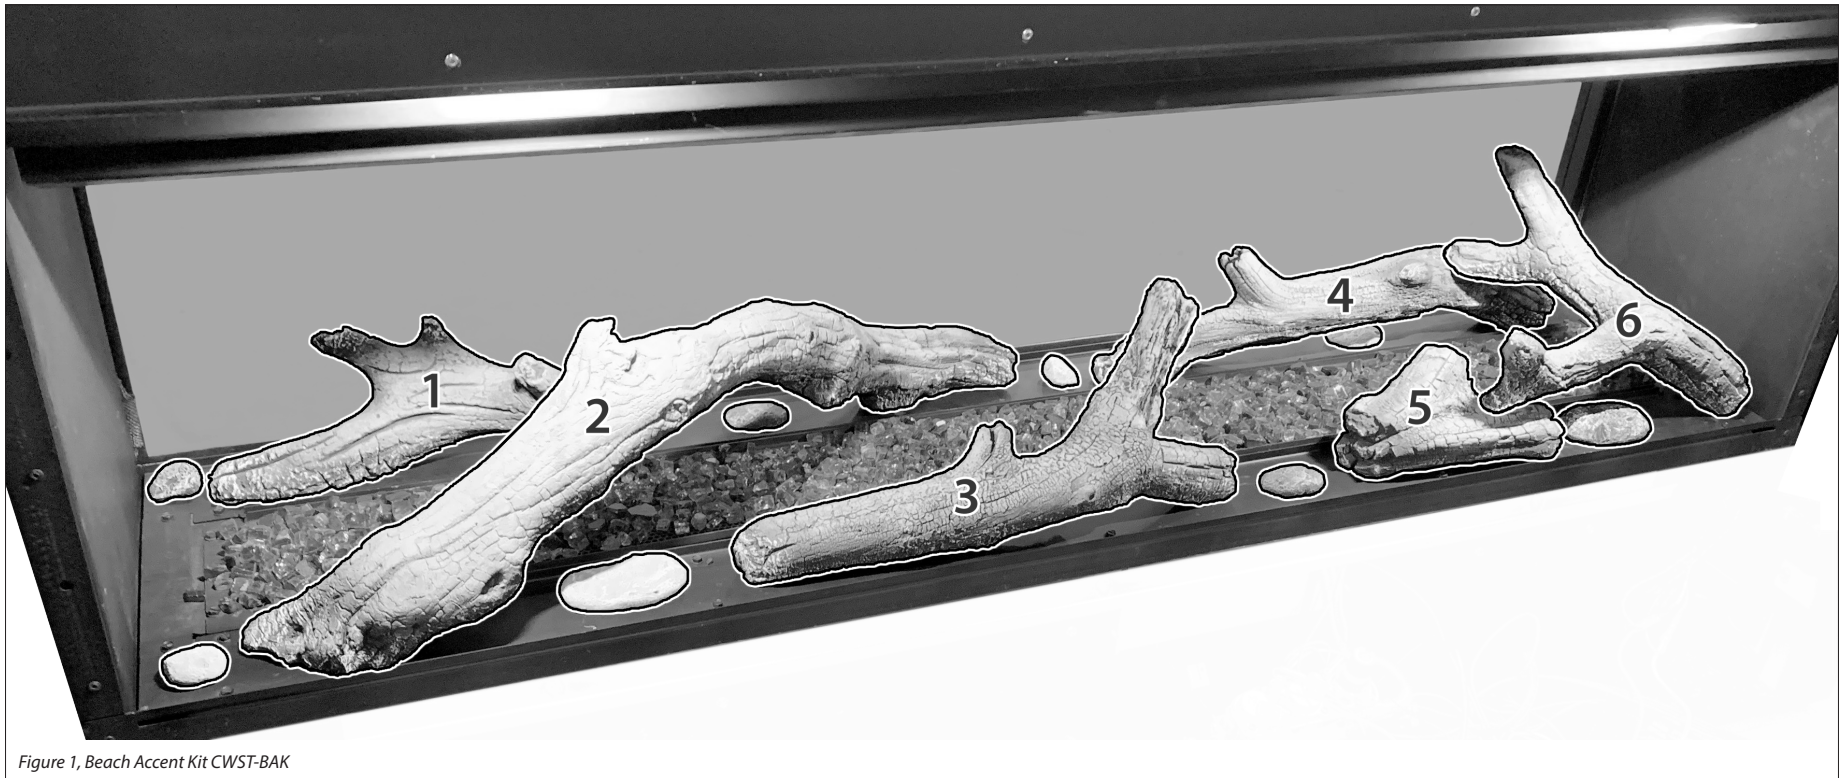


Figure 1, Beach Accent Kit CWST-BAK