

CWST-501 & CWST-B501 LOG SETS

For use with model #CLW-ST

If converting to propane, complete the conversion before installing logs and rocks (if applicable). Follow the conversion instructions included with the kit.

CAUTION: Do not set logs rocks (if applicable) directly on top of burner ports. Do not block pilot assembly. This could cause a potentially hazardous situation.

The figures below are shown from the service side of the fireplace.

1. Install the logs as shown below.
2. Place perimeter media around logs, if installed.
CWST-B501: Figure 2 is the recommended rock accent media placement. The rocks are optional and you may install them on the front and rear perimeter area as desired.
3. Ensure logs do not impede flame when placed across the burner.

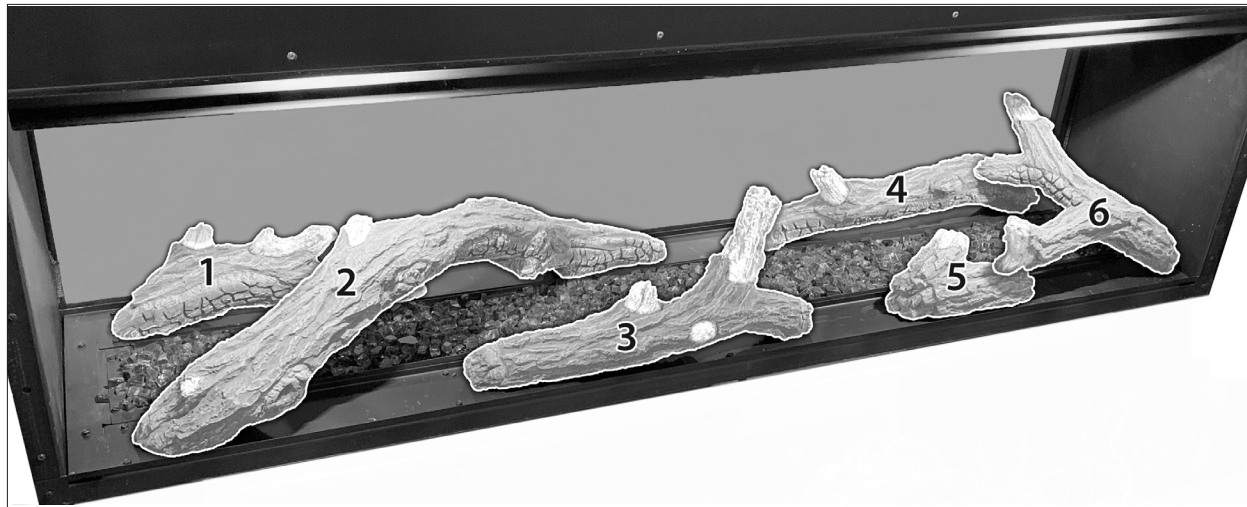


Figure 1, Traditional Log Set CWST-501

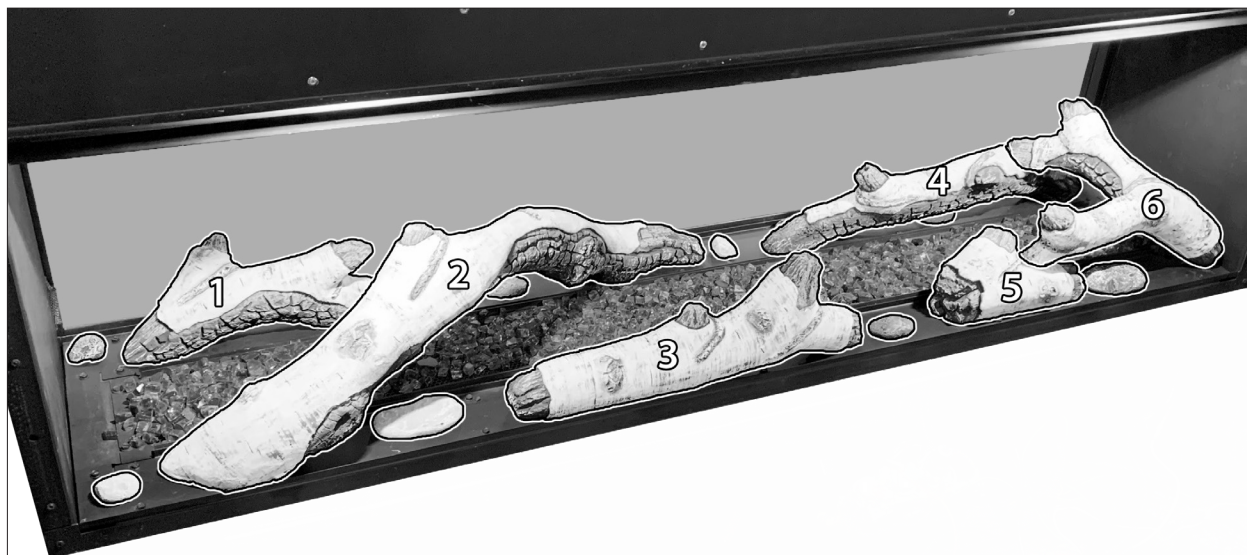


Figure 2, Birchwood Log Set CWST-B501