

BH38-500 & BH38-B501 LOG SETS

For use with models #BHM-38 & #BHM-38-BW



WARNING: This product can expose you to chemicals including ceramic fiber and/or silica dust which is (are) known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, visit www.P65Warnings.ca.gov

CAUTION: Do not place logs directly over burner portholes. Improper log placement may affect flame appearance and cause excessive soot to build upon the logs and glass.

NOTE: Your logs may look different than shown. The logs will install the same for both traditional (#BH38-500) and birchwood (#BH38-B501).

- If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.

- Log numbers are located on the bottom of each log. Refer to the following instructions and illustrations for proper log placement.
 1. Align the holes in the bottom of log 1 with the studs on the burner (**FIGURE 1**) and place the log into position at the rear of the firebox, as shown in **FIGURE 2**.
 2. Align the holes in the bottom of logs 2, 3, 4, and 5 with the studs on the burner (**FIGURE 1**) and place the logs into position, as shown in **FIGURE 2**.

Instructions continue on the following page.

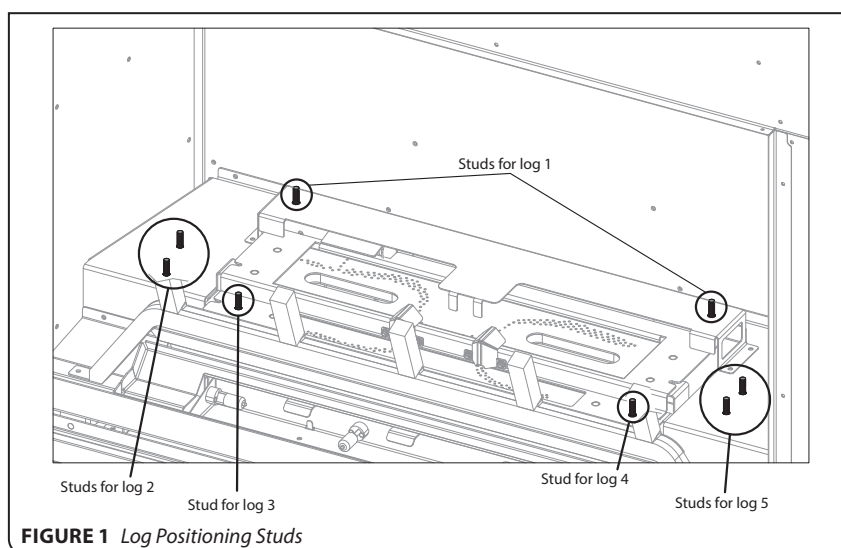


FIGURE 1 Log Positioning Studs

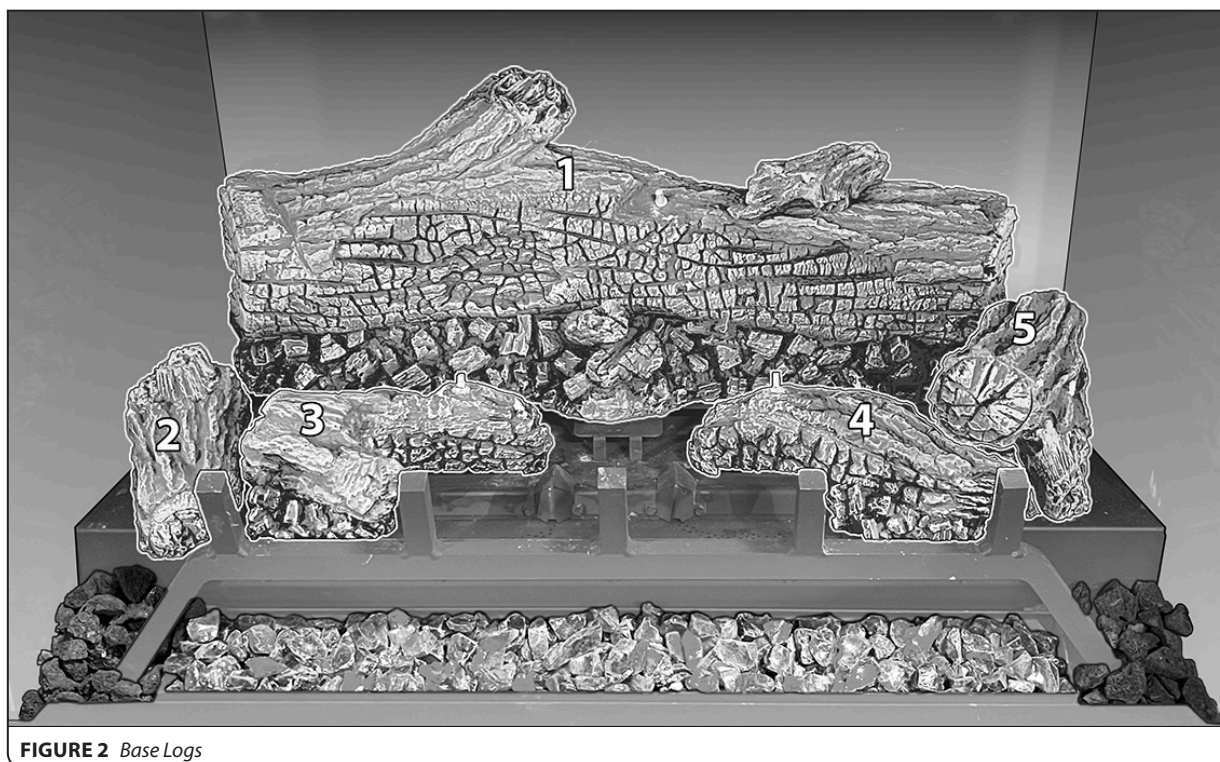


FIGURE 2 Base Logs

3. Align the hole in log 6 with the pin in log 3 (**FIGURE 3**) and position as shown in **FIGURE 4**.
4. Align the hole in log 7 with the pin in log 1 (**FIGURE 3**) and position as shown in **FIGURE 4**.
5. Align the hole in log 8 with the pin in log 4 (**FIGURE 3**) and position as shown in **FIGURE 4**.
6. Align the hole in log 9 with the pin log 6 and position as shown in **FIGURE 4**.
7. Set log 10 in position as shown in **FIGURE 4**
8. Place crushed glass media into the ember bed media tray.

Instructions continue on the following page.

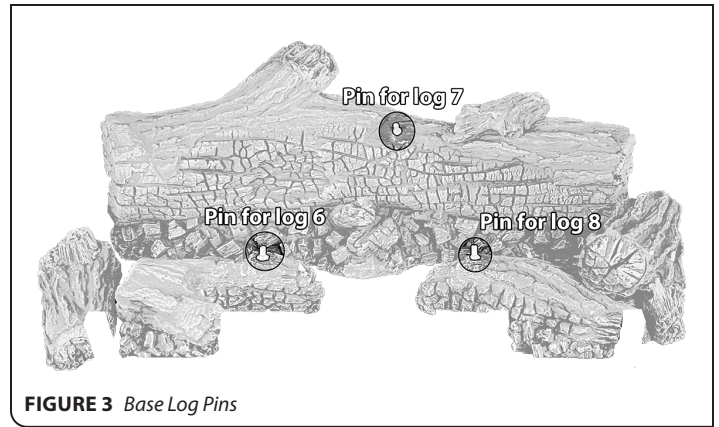


FIGURE 3 Base Log Pins



FIGURE 4 Top Logs

9. Place (4) charred pieces on top of the ember bed. You may place the pieces at your discretion. See **FIGURE 5** and **FIGURE 6**.
10. Distribute lava rock at the sides onto the media tray braces and

- firebox floor.
11. Use a stiff or steel bristle nylon brush to distribute rockwool embers onto logs and burners.

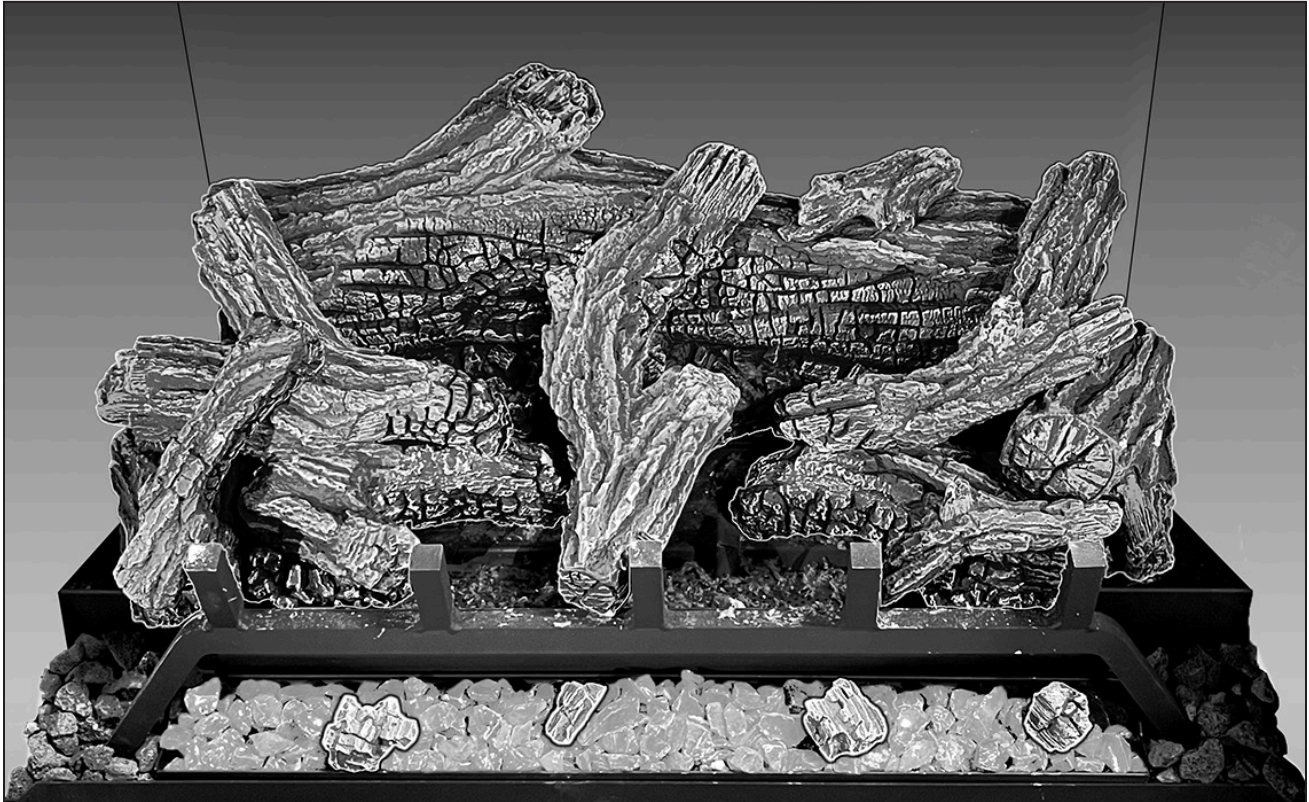


FIGURE 5 BH38-500 Completed Install

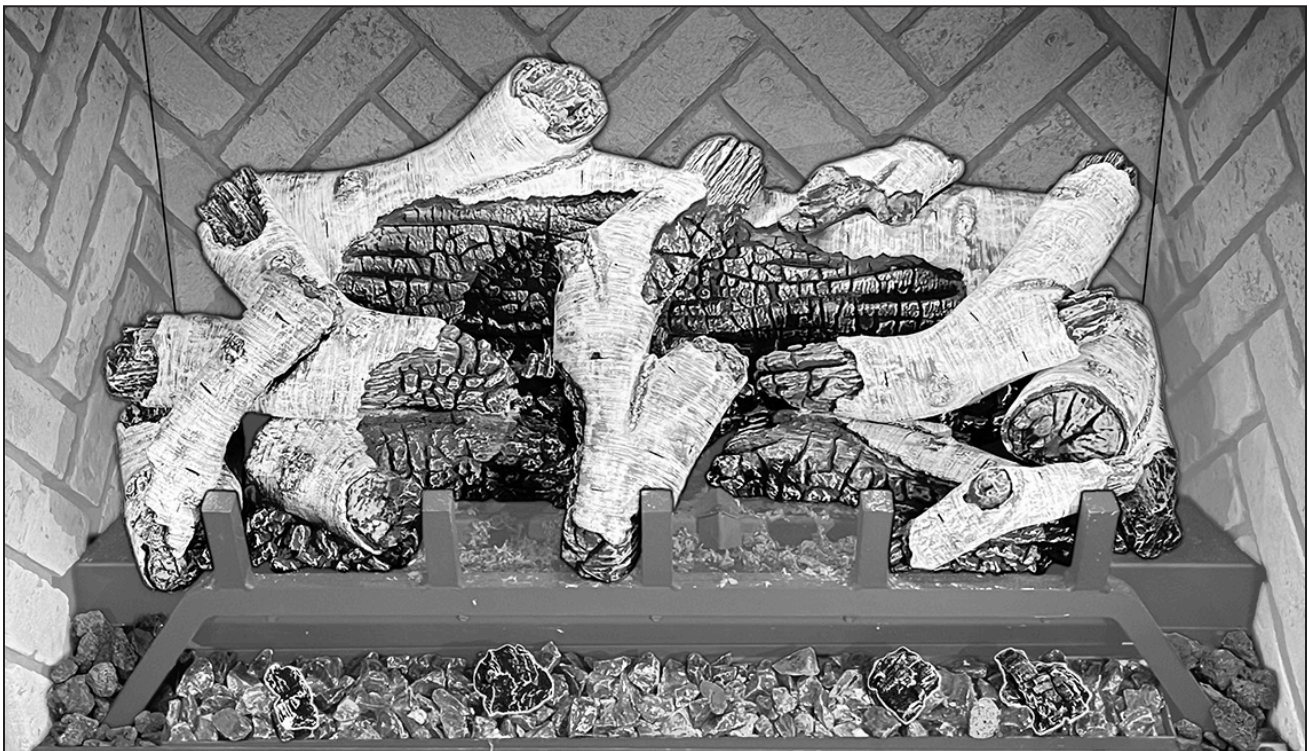


FIGURE 6 BH38-B501 Completed Install