


#NK36-B501 LOG SET

For use with model #NDK-36-DV


KOZY HEAT
FIREPLACES
HUSSONG MANUFACTURING CO., INC.

 **WARNING:** This product can expose you to chemicals including ceramic fiber and/or silica dust which is (are) known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, visit www.P65Warnings.ca.gov

NOTE: Log numbers are located on the bottom or side of each log. Refer to the following instructions and illustration for proper placement. Your components may look different than the ones shown.

CAUTION: Do not place logs directly over burner port holes. Improper log placement may affect flame appearance and may cause excessive soot to build upon the glass.

- If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.
 - If installing a panel set, complete installation of panel set before log installation
 - Install all light bulbs into the front and rear ember bed light kits before log installation.
1. Remove valance from fireplace.
 2. Place log #N36-B1 and log #N36-B2 on corresponding pins on burner (not shown). Logs must lie flat on media tray. Failure to do so will negatively affect the flame
 3. Place log #N36-B3 on the corresponding pin on top of #N36-B2. Rotate the opposite end of #N36-3 towards the back of the fireplace.
 4. Place log #N36-B4 on the corresponding pin on top of #N36-B3. The other end of the #N36-B4 log will lay on the log plate located in the rear center of the fireplace.
 5. Fill back media tray with crushed glass media.
 6. Place log # N36-B5 so the left side of the log aligns on the pin on top of #N36-B1. Place the right side of the log on the exposed pin on log #N36-B4.

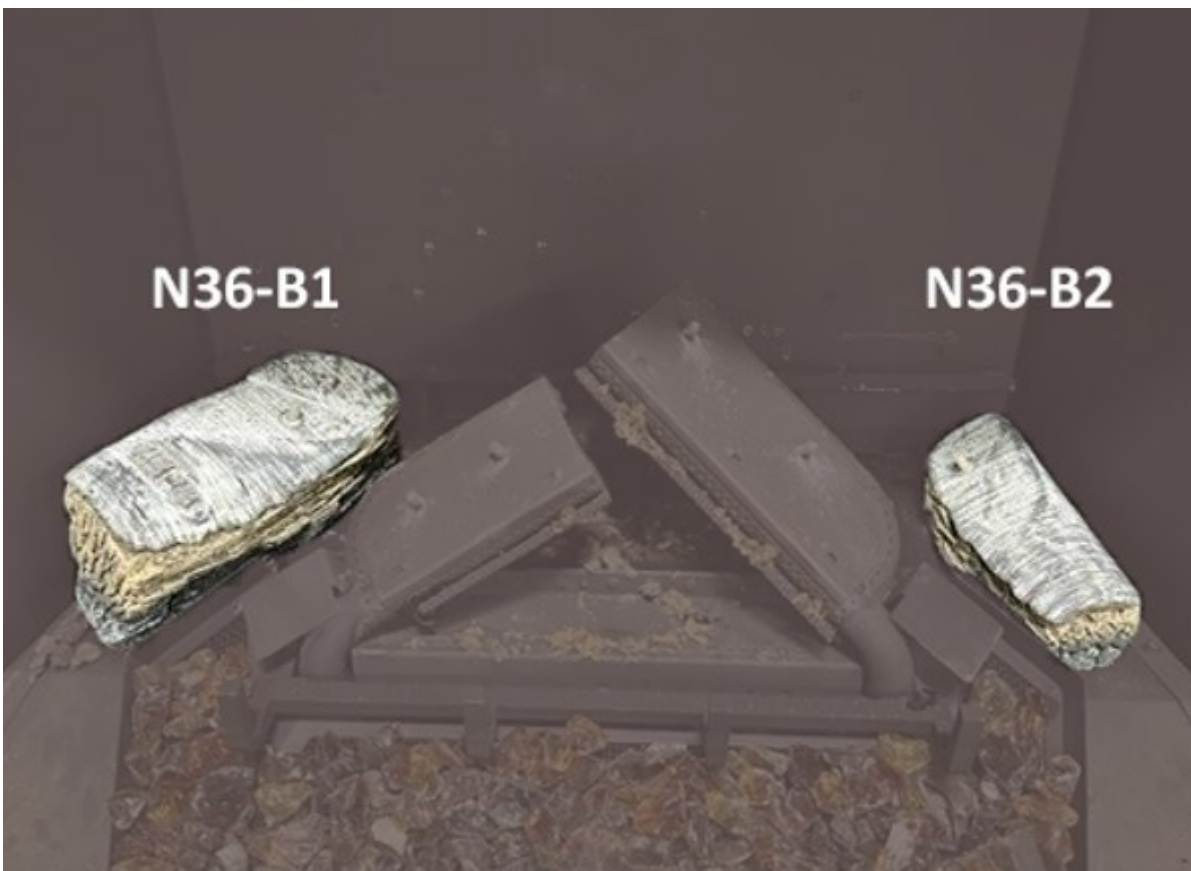


#NK36-B501 LOG SET

For use with model #NDK-36-DV



#NK36-B501 LOG SET

For use with model #NDK-36-DV

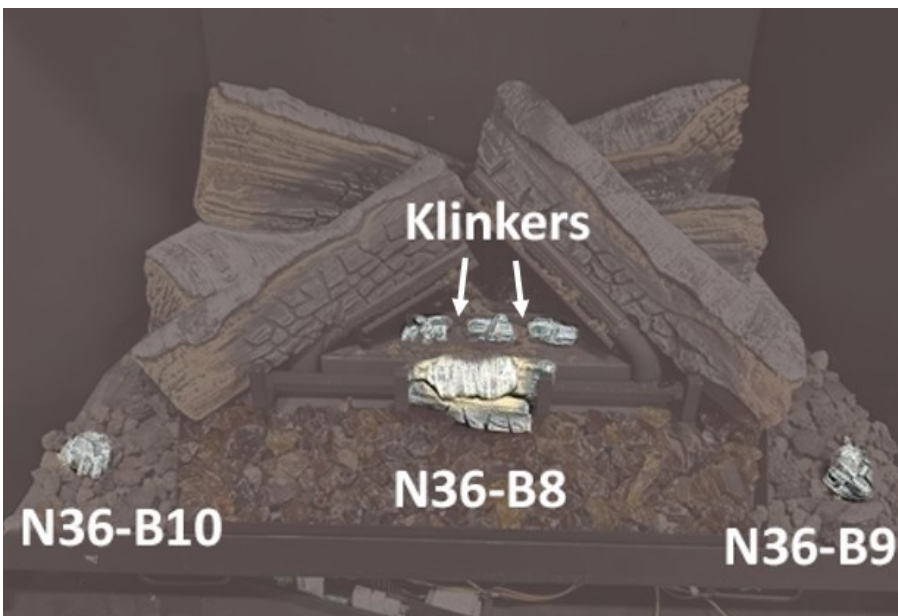

7. Install the crushed media on the emberbed and lava rock along the sides of the emberbed.
8. Place log #N36-B6 on the left burner assembly by aligning the pins on the burner and the holes in the bottom of the log. Repeat with log #N36-B7 for the right burner assembly.
9. Place log #N36-B8 around the center log rack as shown.
10. Place (3) small size klinkers on the rear burner. Ensure that none of the klinkers cover burner ports on this burner. The klinkers should be pushed back against the back flange of this burner.
11. Place #N36-B9 and #N36-B10 on the sides of the lava rock.
12. Use a stiff or steel bristle brush to distribute rockwool embers onto the burners and logs.