



#G6020-500 Weathered Log Set

For use with model Generation 6020 & Generation 6020 Screen

⚠ WARNING: This product can expose you to chemicals including Silica Dust, which is [are] known to the State of California to cause cancer, birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

NOTE: Log numbers are located on the bottom or side of each log. Refer to the following instructions and illustration for proper placement. Your components may look different than the ones shown.

CAUTION: Do not place logs directly over burner port holes. Improper log placement may affect flame appearance and may cause excessive soot to build upon the glass.

- *If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.*

- *If installing a black glass panel set, complete installation of panel set before log installation*

Instructions

1. Locate the preinstalled pins on the burner media tray. See Figure 1. You will install the log set directly on the media tray before installing any crushed media.
2. Install log #1 (Pin #1 & #2), #3 (Pin #8 & #9), and #8 (Pin #5 & #6). See Figure 2.
3. Install log #2 (Pin #7 & #3), #6 (Pin #12 & #4). See Figure 3.

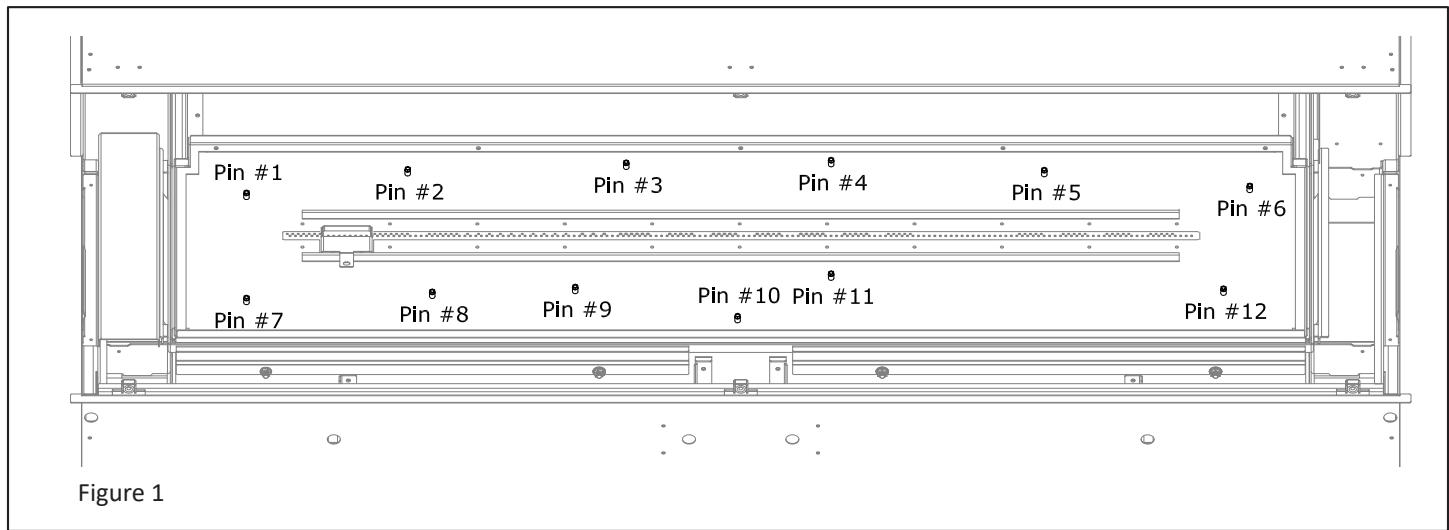


Figure 1

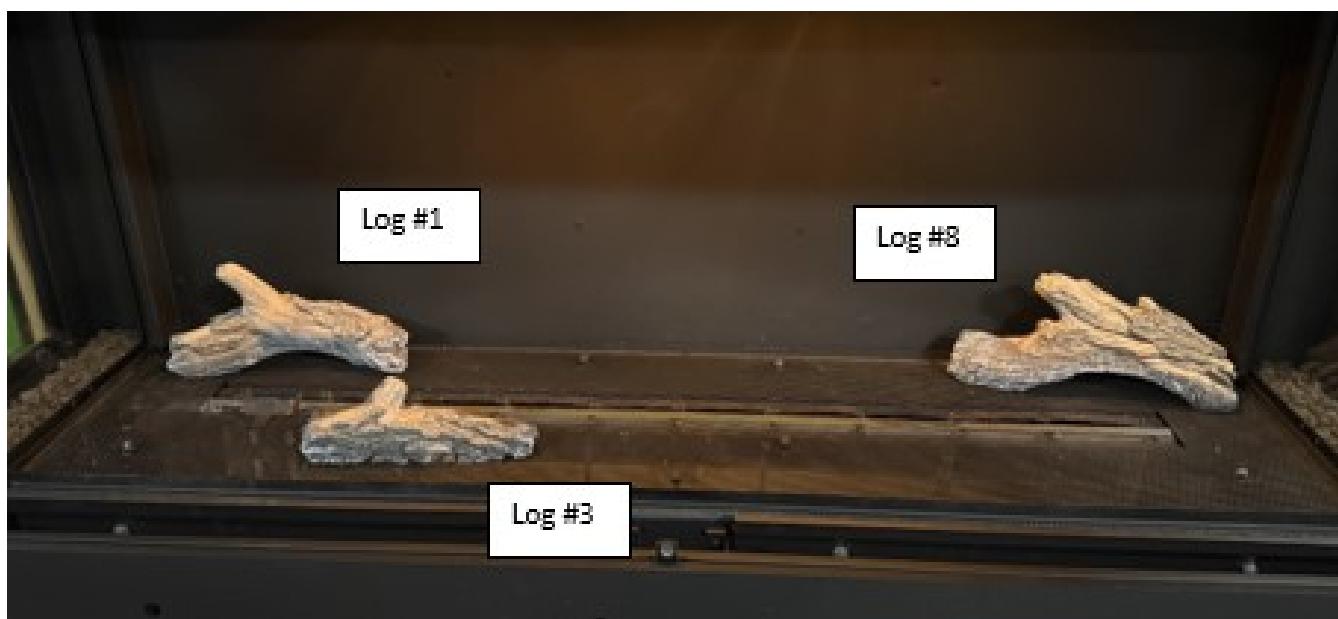


Figure 2



Figure 3

4. Install Log #4 (Pin #10) and #7 (Pin #11). The front edge of log #4 is located be the pin in the burner media tray. Log #4 will rest on the pin on Log #2. Log #7 uses a pin on the burner media tray to locate the left edge. The top edge of this log will rest against log #8.

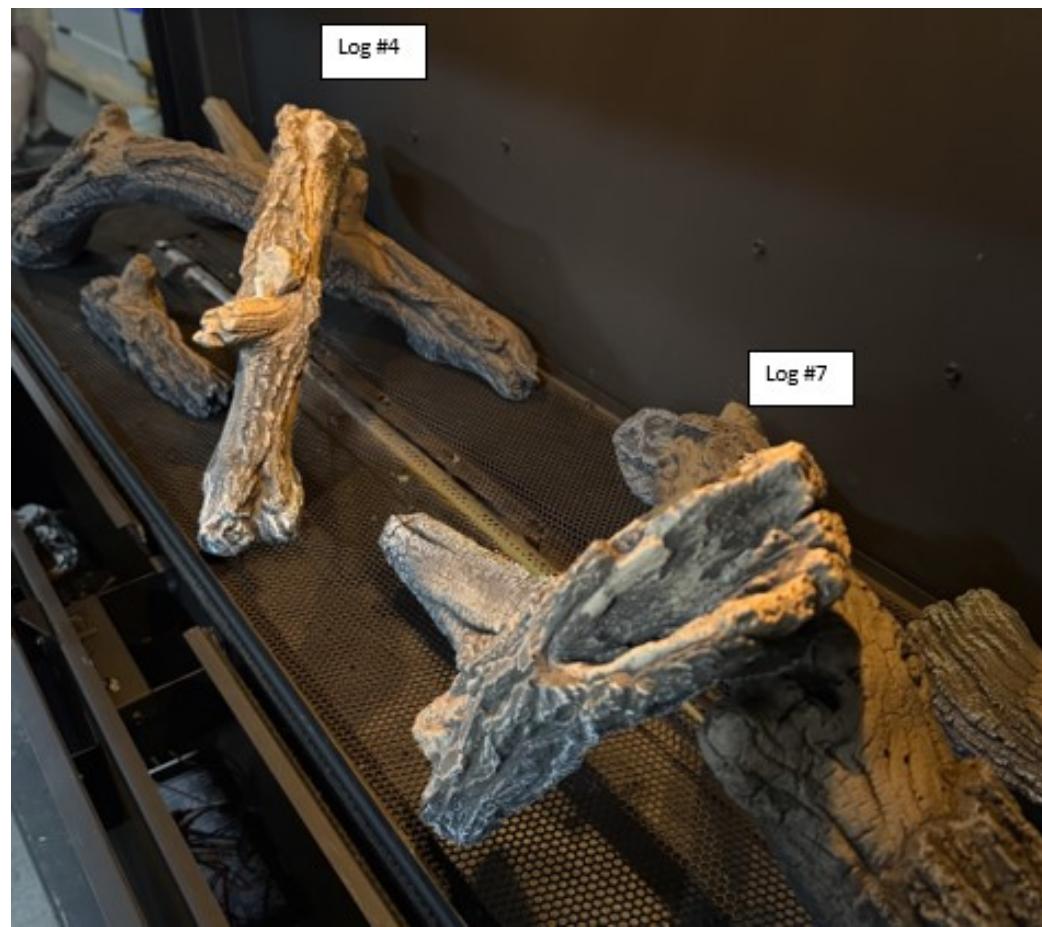


Figure 4

5. Install Log #5. The section closest to you on log #5 will be positioned on a pin on the top of log #4. The end of log #5 is shaped in a "V" and will rest on the end of log #8. Install your crushed media around the logs and directly on the media tray now.

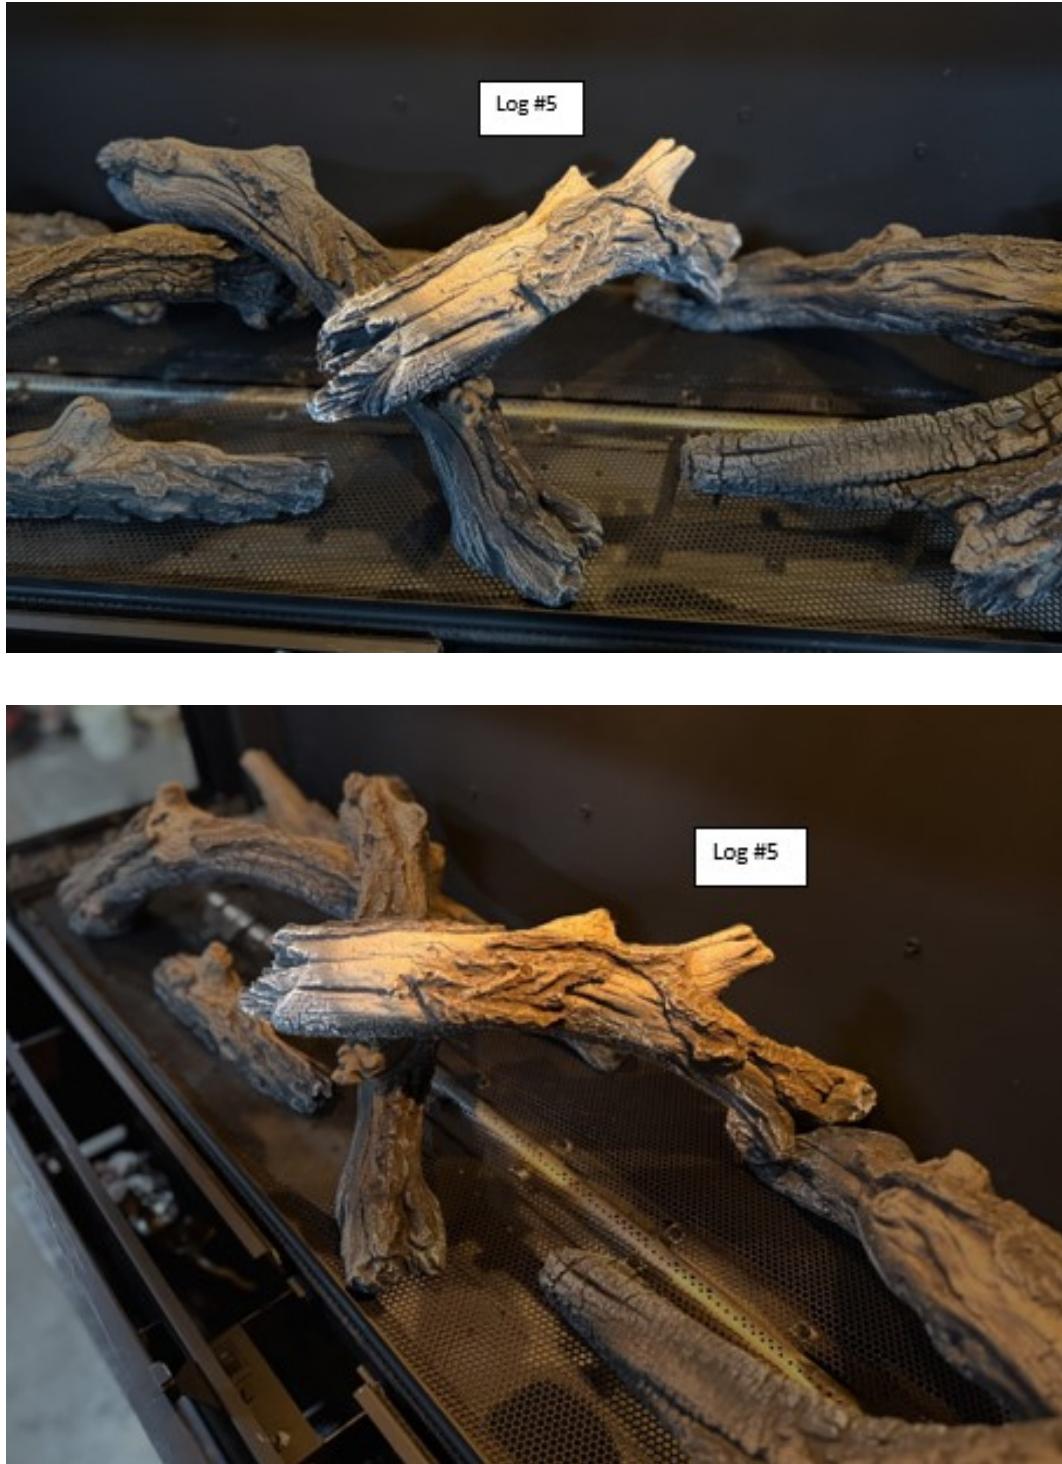


Figure 5