

#GENL-B501 Birch Log Set

For use with model Generation 6020, Generation 6020 Screen, Generation 7220, and Generation 7220 Screen

⚠ WARNING: This product can expose you to chemicals including Silica Dust, which is [are] known to the State of California to cause cancer, birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

NOTE: Log numbers are located on the bottom or side of each log. Refer to the following instructions and illustration for proper placement. Your components may look different than the ones shown.

CAUTION: Do not place logs directly over burner port holes. Improper log placement may affect flame appearance and may cause excessive soot to build upon the glass.

- *If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.*
- *If installing a black glass panel set, complete installation of panel set before log installation*

Note: The Generation 7220 uses the entire log set. The Generation 6220 and 6220 Screen does not use Logs #B9, #B10, and #B11.

Note: Generation 7220 Only: If your fireplace is converted to Propane and the fireplace is installed with minimum horizontal venting you will need to adjust the burner venturi to 5/8" (16mm) open when installing an optional log set.

Section 1.0 Generation 6020 and Generation 6020 Screen Instructions

Instructions

1. Locate the preinstalled pins on the burner media tray. See Figure 1. You will install the log set directly on the media tray before installing any crushed media.
2. Install log #B1 (Pin #1 & #2), #B3 (Pin #8 & #9), and #B8 (Pin #5 & #6). See Figure 2.
3. Install log #B2 (Pin #7 & #3), #B6 (Pin #12 & #4). See Figure 3.

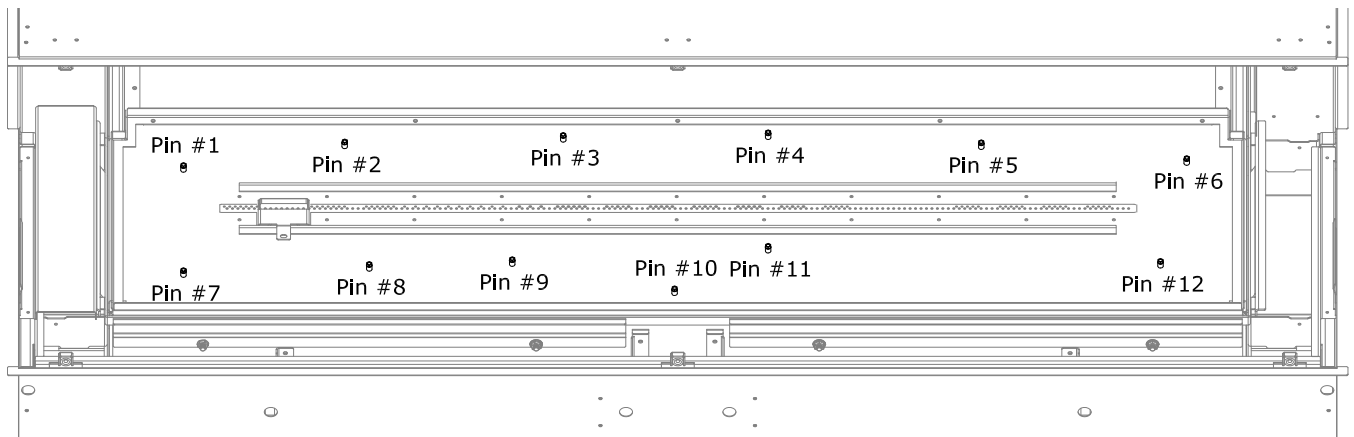


Figure 1 - Log Pin Locations

Section 1.0 Generation 6020 and Generation 6020 Screen (continued)

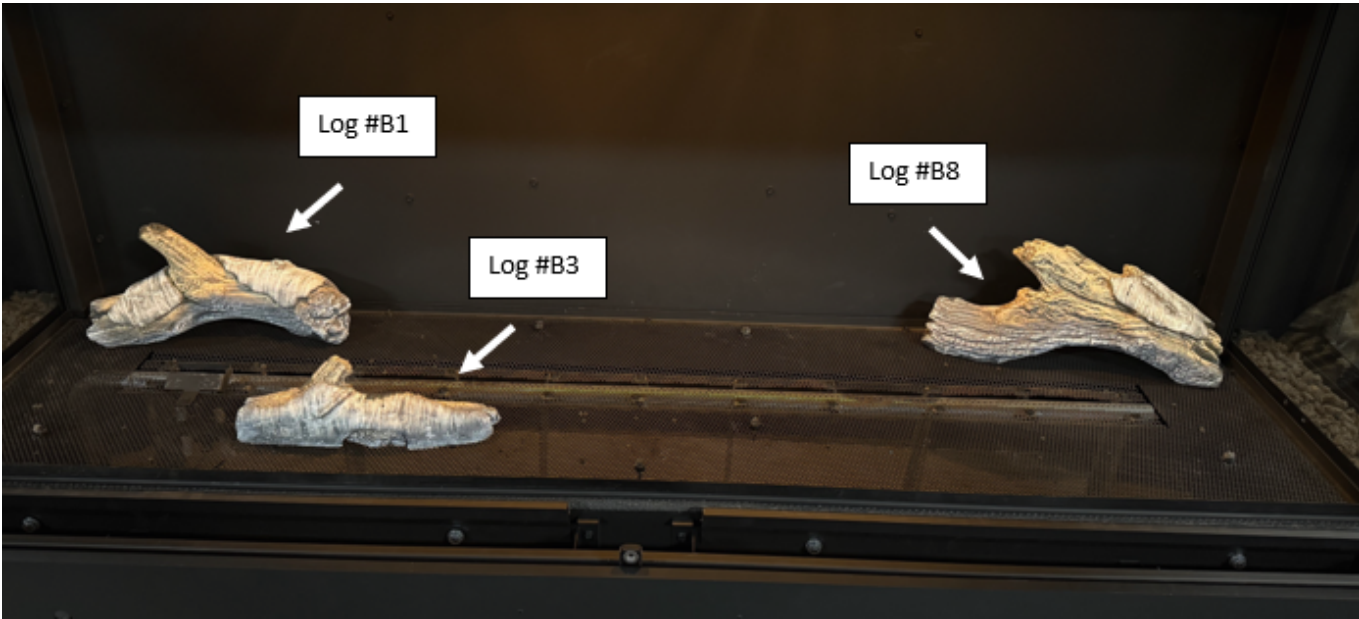


Figure 2 - Log #B1, #B3, and #B8.



Figure 3 - Log #B2, and #B6

Section 1.0 Generation 6020 and Generation 6020 Screen (continued)

4. Install Log #B4 (Pin #10) and #B7 (Pin #11). The front edge of log #B4 is located on pin #10 in the burner media tray. Log #B4 will rest on the pin on Log #B2. Log #B7 uses pin #11 on the burner media tray to locate the left edge. The top edge of this log will rest against log #B6.
5. Install Log #B5. The section closest to you on log #B5 will be positioned on a pin on the top of log #B4. The end of log #B5 is shaped in a "V" and will rest on the end of log #B6. Install your crushed media around the logs and directly on the media tray now.



Figure 4 - Log #B4 and #B7



Figure 5 - Log #B5

Section 2.0 Generation 7220 and Generation 7220 Screen Instructions

1. Locate the preinstalled pins on the burner media tray. See Figure 6. You will install the log set directly on the media tray before installing any crushed media.
2. Install log #B1 (Pin #1 & #2), #B3 (Pin #9 & #10), #B8 (Pin #7 & #8), and #B11 (Pin #12 & #13). See Figure 7.

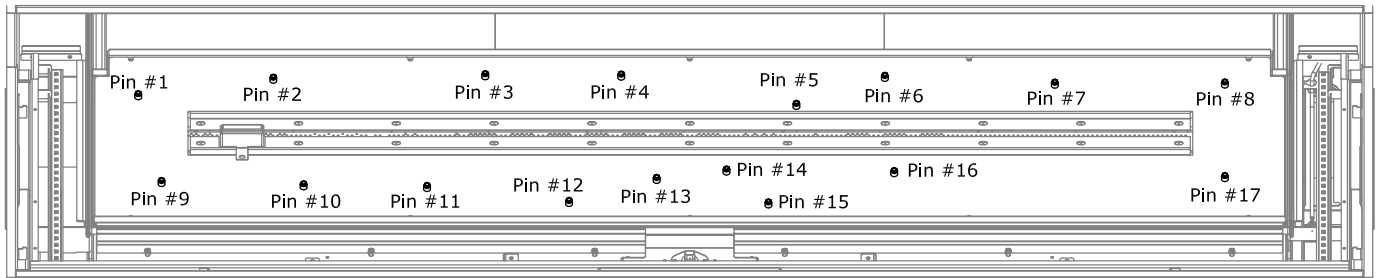


Figure 6 - Log Pin Location

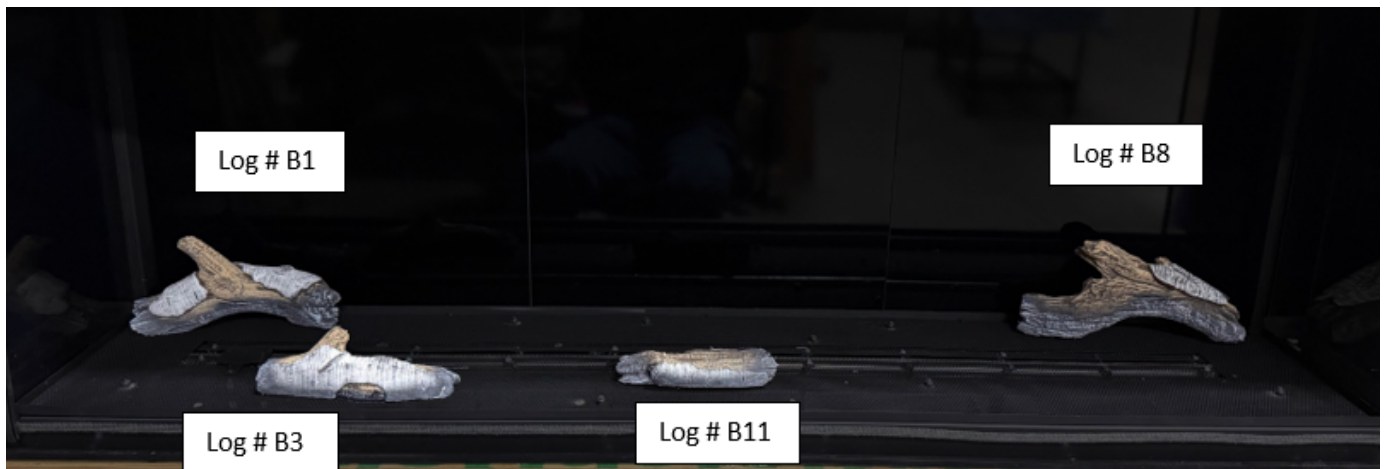


Figure 7 - Log #B1, #B3, #B8, and #B11

Section 2.0 Generation 7220 and Generation 7220 Screen (continued)

3. Install log #B2 (Pin #9 & #3). Install log #B4 (Pin #12) and this log will rest in a pin on log #B2. Install log #B6 (Pin #17 & #6) and then install log #B9 (Pin #4 & #5) where the log will rest on log #B6 as well. See Figure #8.
4. Install Log #B5. The section closest to you on log #B5 will be positioned on a pin on the top of log #B4. The end of log #B5 is shaped in a “V” and will rest on the end of log #B9. Install log #B10 on pin #15 and the far end of the log will rest on the pin on log #B9. Install log #B7 using Pin #16 and it will rest on log #B6. See Figure #9. Install your crushed media around the logs and directly on the media tray now.

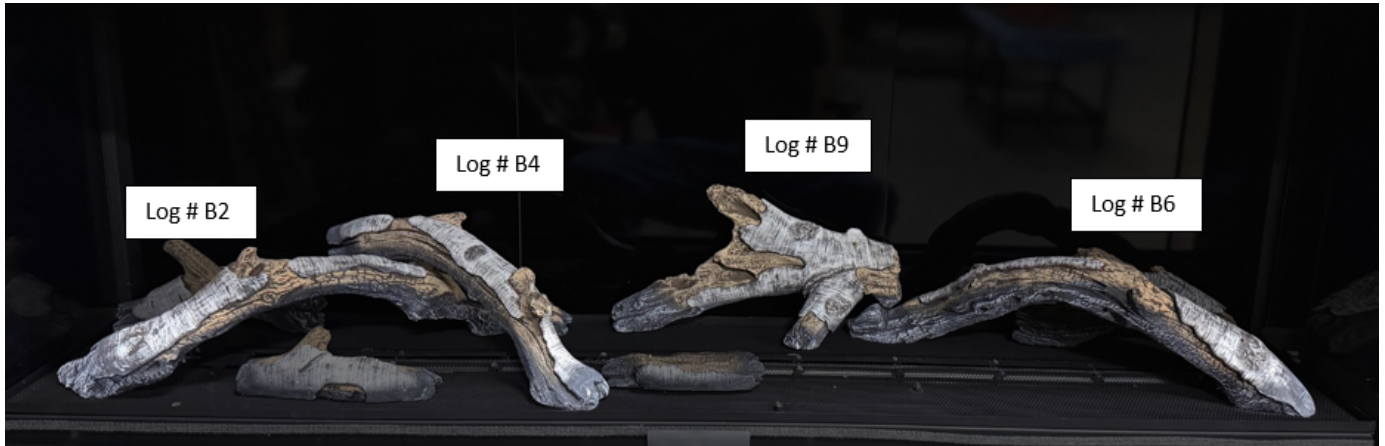


Figure 8 - Log # B2, #B4, #B9 and #B6



Figure 9 - Log #B5, #B10, and #B7