

Generation 7220 Black Glass Panel Installation

Part # G7220-BG900

For: Generation 7220 & Generation 7220 Screen

WARNING: This product can expose you to chemicals including Ethyl-benzene which is (are) known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, visit www.P65Warnings.ca.gov

- Note: When installing black glass panels ensure the textured side of the glass panel is installed on the backside. The smooth side of the panel should face outward.
- If converting to propane, complete the conversion before installing the black glass panel set. Follow the conversion instructions included with the fireplace.

Kit Contents: (3) Rear Interior Firebox Panels, (2) Rear Perimeter Panels, (2) Side Panels, (2) Rear Interior Firebox Panel Clips, and (2) Rear Perimeter Panel Clips

Installation:

1. Remove the safety barrier (glass or screen), perimeter media tray, firebox glass, and crushed media (if installed).
2. Install the (3) rear interior firebox black glass panels. These three panels are the same size and interchangeable. Secure with (2) rear interior firebox panel clips and (2) sheet metal screws as shown. See Figure 1.

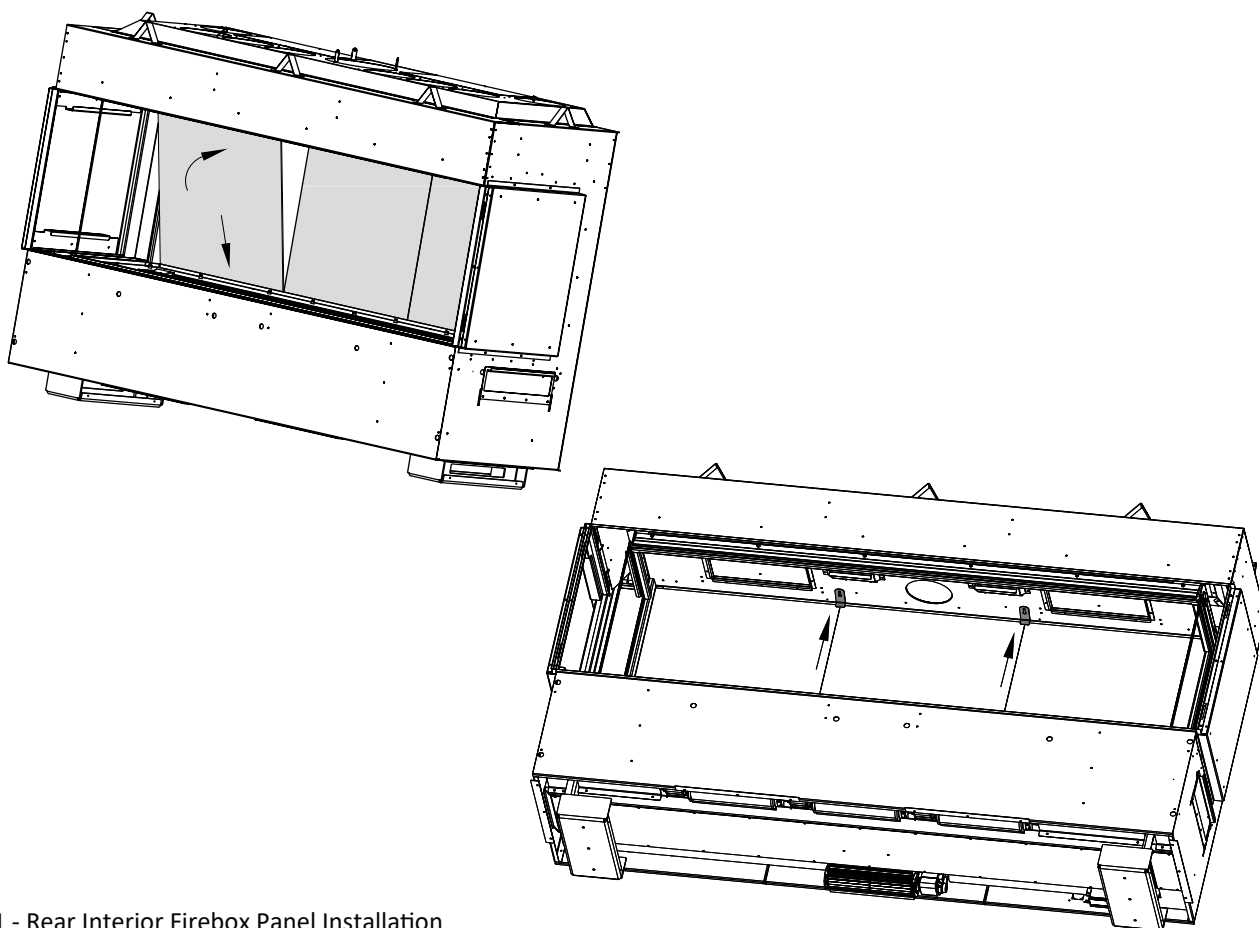


Figure 1 - Rear Interior Firebox Panel Installation



HUSSONG MANUFACTURING CO., INC.

Generation 7220 Black Glass Panel Installation

Part # G7220-BG900

For: Generation 7220 & Generation 7220 Screen

3. Install the (2) rear perimeter black glass panels by tilting them sideways until you get them to the back of the fireplace. Place the top edge of the glass up into the preinstalled top perimeter panel clip and tilt into place. While holding the black glass in place, use the supplied perimeter panel clip and secure the clip on the bottom of the black glass with (2) sheet metal screws. See Figure 2.

Note: The Generation 7220 Screen will have black metal panels installed on the side. You will remove these metal panels to provide more access to install these rear perimeter black glass panels. You may also find it easier to temporarily remove the side block off panels to provide greater access for the rear perimeter panel installation.

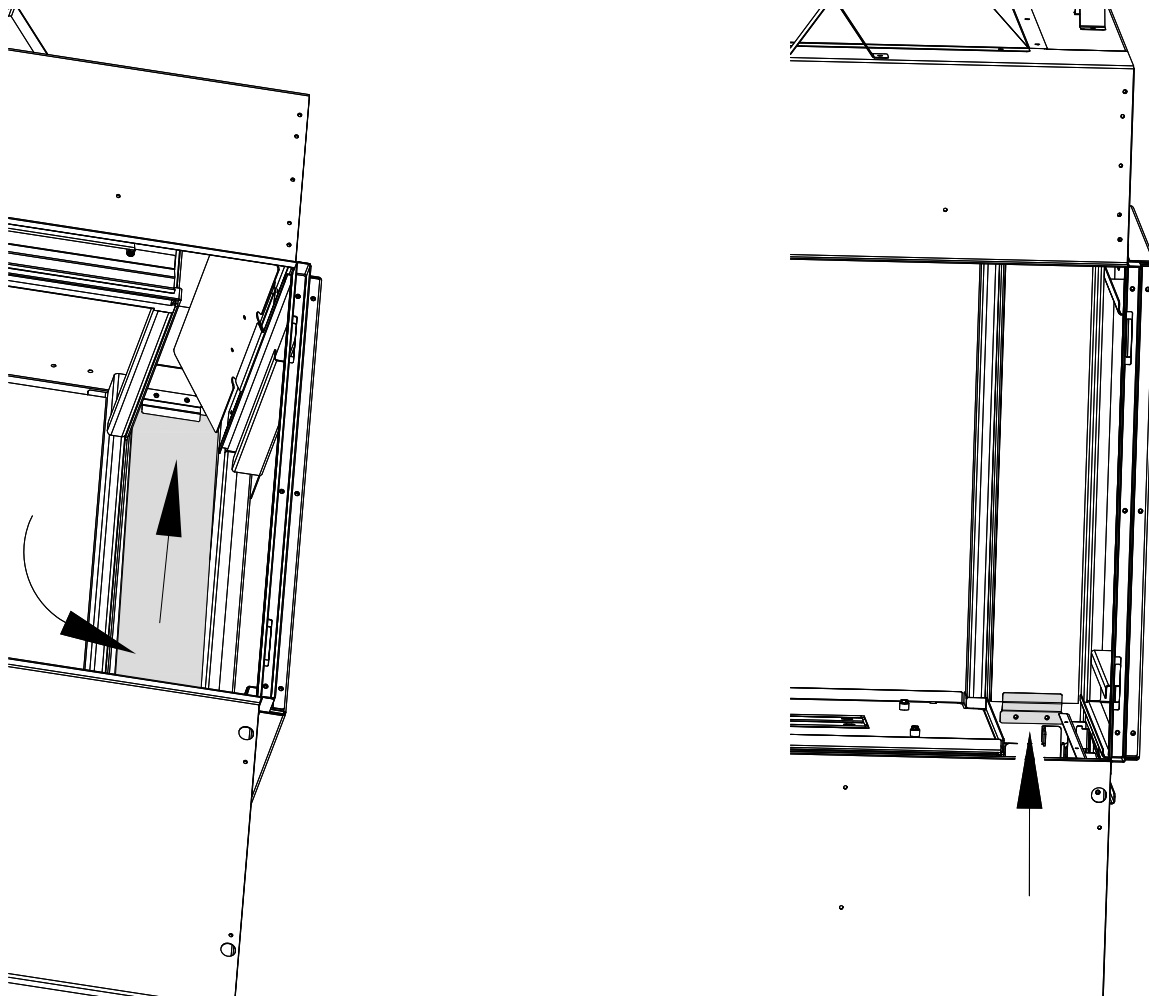


Figure 2 - Rear Perimeter Panel Installation



HUSSONG MANUFACTURING CO., INC.

Generation 7220 Black Glass Panel Installation

Part # G7220-BG900

For: Generation 7220 & Generation 7220 Screen

4. Slide the side panel(s) in place. This step will vary depending on your installation type (Single-Sided, Corner, or Bay Installation).
Note: The Generation 7220 Screen will have black metal panels installed on the side. You will remove these metal panels and replace them with the black glass panels.

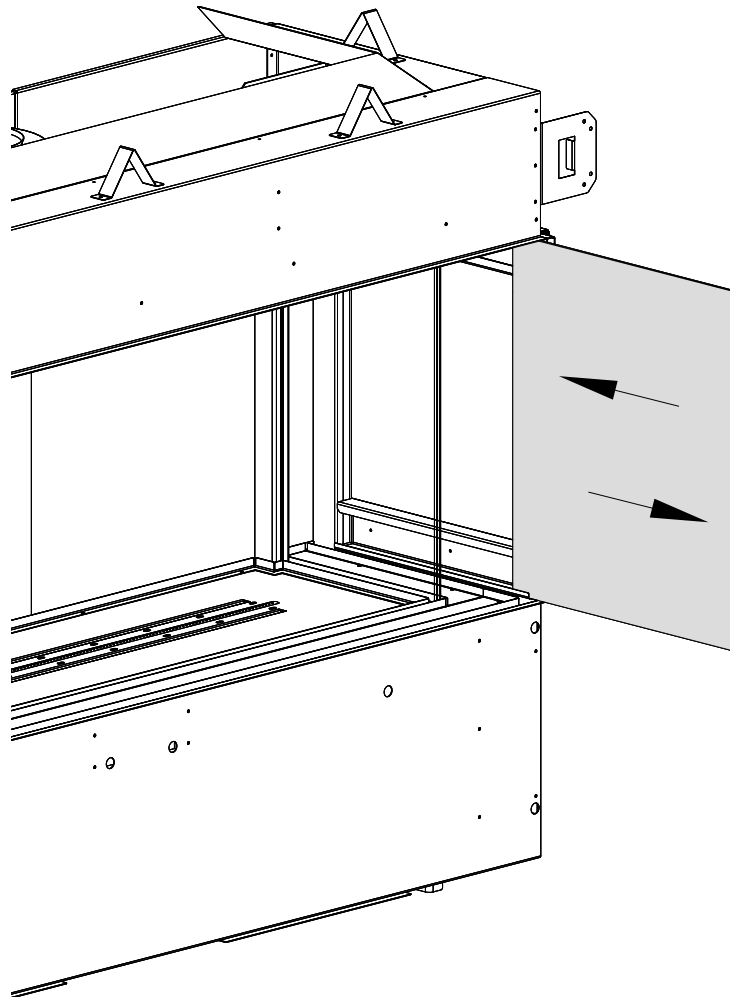


Figure 3 - Side Panel Removal and Installation